

ClassicSeries® Dental Vacuum Installation


Applies to Models:

Single Non-Recycler Models CV3. CV5 Twin Non-Recycler Models CV6. CV10 Single Recycler Models CV3R. CV5R Twin **Recycler** Models CV6R. CV10R

Equipment Alert



Wet-Ring Vacuum system must be installed per local plumbing and electrical codes. Allow Wet-Ring Vacuum system to reach room temperature before installing.
Refer to "Site Requirements" and "Site Layout" in this manual for site restrictions and piping layout. Do not turn water by-pass valve. The valve is factory set for recycler mode in CLOSED postion. (Refer to ClassicSeries® Service Manual on www.Documark.com for more information)

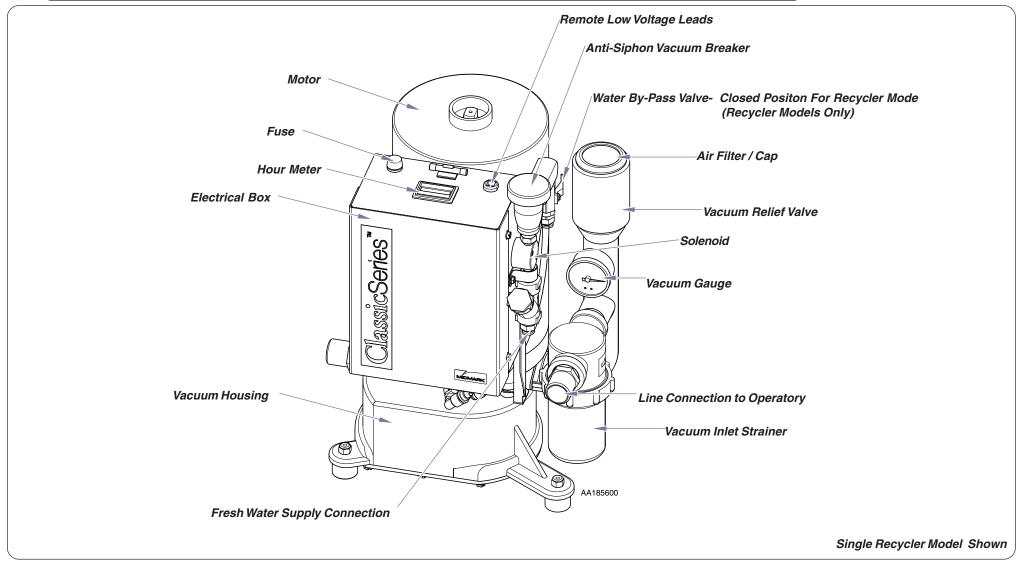

1

Wet-Ring Vacuum Site Requirements




Equipment Alert

Harmful odors, vapor contaminants and nitrous oxide gasses are vented out the top of the separator, while liquid waste flows out of the lower drain and into a "P"-Trap or floor sink. **Verify all local codes before installing.**

Models

Electrical		Single	e Models			Twin	Models		
Supply	CV3	CV3R	CV5	CV5R	CV6	CV6R	CV10	CV10R	
					115 or 208-230	115 or 208-230	208-230	208-230	
Voltage	115 or 208-230	115 or 208-230	208-230	208-230	(Each Pump)	(Each Pump)	(Each Pump)	(Each Pump)	
Phase	Single Phase, 50 / 60 Hz								
Vire Size to Control Panel	18 / 3 Jacketed Bell Wire								
Branch Circuit Breaker Size		20 AMP (per each pump)							
Product Electrical Ratings									
115 VAC 50/60 HZ	15.0 AMPS	15.0 AMPS			15.0 AMPS	15.0 AMPS			
208/230 VAC 50/60 HZ	8.2 AMPS	8.2 AMPS	13.1 AMPS	13.1 AMPS	8.2 AMPS	8.2 AMPS	13.1 AMPS	13.1 AMPS	
Plumbing									
ntake (Suction Line)									
ype	PVC								
ine Sizing	1" Hose with 3/4" NPT Connection				1 1/2" Hose with 1 1/4" NPT Connection				
Vater Source									
ype ine Sizing	Poly Tubing 1/2" NPT x 1/4" 1/2" NPT x 3/8"								
ine Sizing Pressure Range		1/2" NI	21 X 1/4"	20-120 nei	1/2" NPT x 3/8"				
Vater Temperature Range		20-120 psi / 1.4-8.3 bar 35-80° F / 2-12° C							
Separator		S	mall		Large				
ent Size			man		2"				
nlet Hose		3/4	" NPT		1 1/4" NPT				
rain Hose	3/4" NPT				1" NPT				
Platform Drain Hose									
уре			N/A		Clear Vinyl				
ize	N/A				3/8" OD				
xhaust									
ype	PVC								
ine Sizing	1" Hose with 3/4" NPT Connection				1 1/2" Hose with 1 1/4" NPT Connection				
Environmental	,								
Equipment Room Ambient	40° - 104° Fahrenheit / 4° - 40° Celsius								
emperature - Operational									

Wet-Ring Vacuum Site Requirement Layout

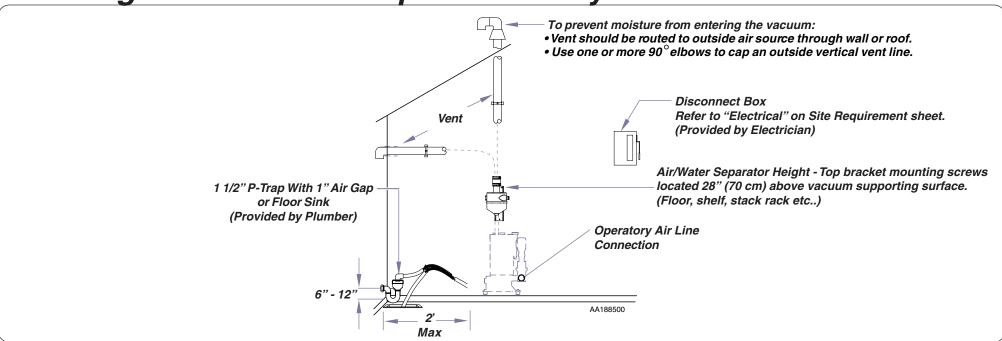

3

Notes:

© Midmark Corporation 2007

Important Information

Intended Use

To provide suction during general examinations and procedures conducted by qualified dental professionals.

Electromagnetic Interference

This Midmark Wet-Ring Vacuum is designed and built to minimize electromagnetic interference with other devices.

However, if interference is noticed between another device and these units:

- Remove interfering device from room
- Plug interfering device into an isolated circuit
- Increase separation between unit and interfering device
- Contact Midmark if interference persists

Disposal of Equipment

At the end of product life, the unit(s), accessory, and other consumable goods may become contaminated from normal use. Consult local codes and ordinances for proper disposal of equipment, accessories and other consumable goods.

Transportation / Storage Conditions



Keep dry



Maximum stacking height (palletted units)



Fuse rating specification



Caution hot surface



Consult User Guide for important information.



Proper shipping orientation



Fragile



Protective earth ground

PXO Ordinary Equipment

This product has been evaluated with respect to electrical shock, fire & mechanical hazards only, in accordance with UL60601-1 and CAN/CSA C22.2 NO. 601.1.



Safety Symbols



WARNING

Indicates a potentially hazardous situation which *could* result in serious injury if not avoided.

CAUTION

Indicates a potentially hazardous situation which <u>may</u> result in minor or moderate injury if not avoided. It may also be used to alert against unsafe practices.

Equipment Alert

Indicates a potentially hazardous situation which could result in equipment damage if not avoided


Note

Amplifies a procedure, practice, or condition.

Before you Install...

Pre-Install steps..

- A. Remove vacuum(s) from shipping platform.
- B. Move vacuum to a dry, well ventilated area on a solid. level surface.
- C. Verify all sides of Vac Unit are not obstructed.
- D. Unpack installation kit.
- E. Install rubber feet. (Single Pump Models Only)
- F. Verify water by-pass valve is in recycler positon, CLOSED.

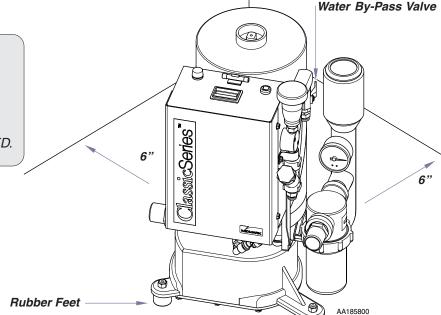

Single Recycler Model Shown

Equipment Alert


Scavenging polishing paste with abrasives, running the pump with no water supplied, using water with high mineral content, or water with excessive sediment can damage or reduce the lifespan of the pump and is not considered a defect in material or workmanship.


Install Kits


Qty 3


Qty 1


Single Models

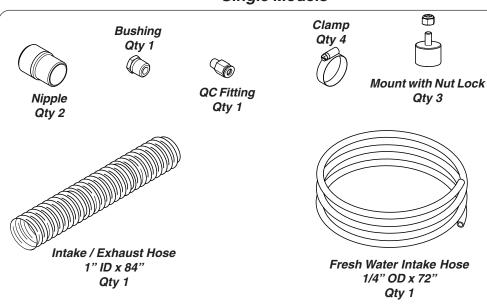

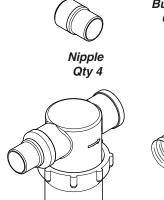

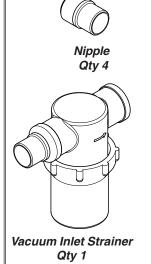

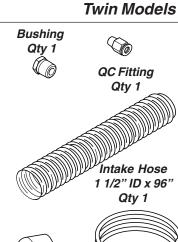

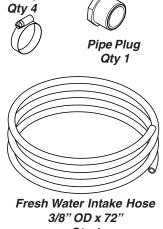

Clamp

Intake Hose

Qty 1

Cap Platform Drain Hose Qty 1 3/8" OD x 96", Qty 1

Installation Plumbing Connections - Single Models with Air/Water Separator

Single Models Air/Water Plumbing...

A. Mount Separator 28" (70 cm) above vacuum supporting surface.
B. Install exhaust silencer into 1" exhaust hose from vacuum to P-trap if applicable. If not using an exhaust silencer....

C. Connect exhaust hose from vacuum to separator.


D. Connect 3/4" hose from separator to drain or P-trap.

E. Connect 2" PVC to top of separator and out to vent.

F. Connect 1/4" poly tube from vacuum to water supply.
G. Connect 3/4" NPT fitting and hose clamp from vacuum line to operatory.

Note

Exhaust silencer installation is an optional for the Wet-Ring Vacuums. Wet-Ring Vacuums are operational without exhaust silencer.

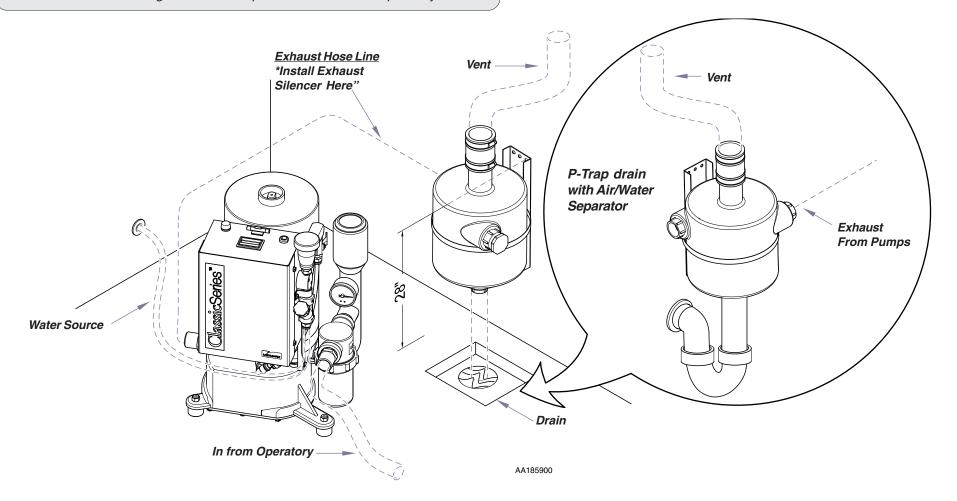


Installation Plumbing Connections - Single Models without Air/Water Separator

Single Model Plumbing...

- A. Install exhaust silencer into 1" exhaust hose from vacuum to P-trap if applicable. If not using an exhaust silencer....
- B. Install 1" exhaust hose from vacuum to P-trap or floor drain.
- C. Connect 1/4" poly tube from vacuum to water supply.
 D. Connect 3/4" NPT fitting and hose clamp to vacuum line from operatory.

Note

Exhaust silencer installation is an optional for the Wet-Ring Vacuums. Wet-Ring Vacuums are operational without exhaust silencer.

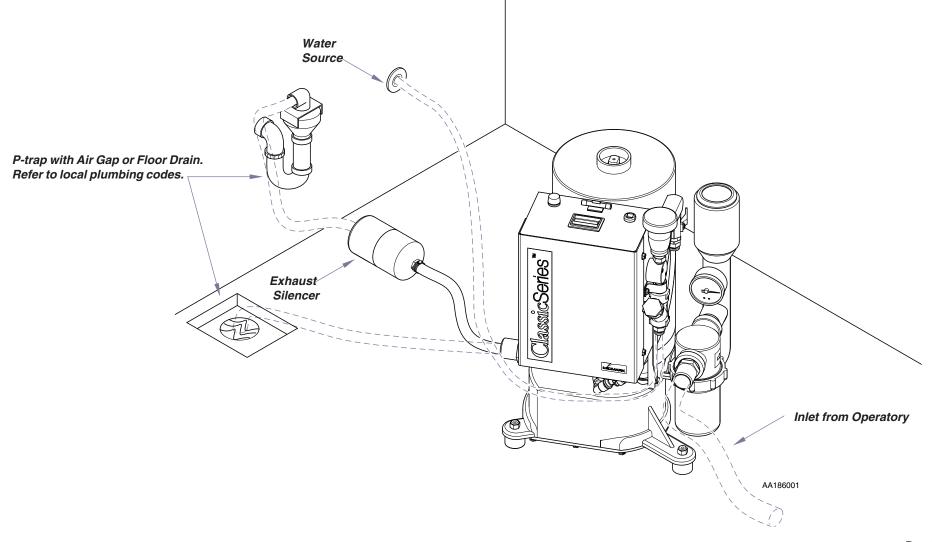

Installation


Plumbing Connections - Twin Models with Air/Water Separator



Exhaust and inlet connections can be installed on either the RH or LH sides. Install hose connections to one end and plug/cap the other end.


Twin Model Plumbing...

- A. Mount Separator 28" (70 cm) above vacuum supporting surface. B. Connect exhaust hose from exhaust to separator.
- C. Install plug in exhaust end not in use. D. Connect 1"hose from separator to drain or P-trap.
- E. Connect 2" PVC to top of separator and out to vent.

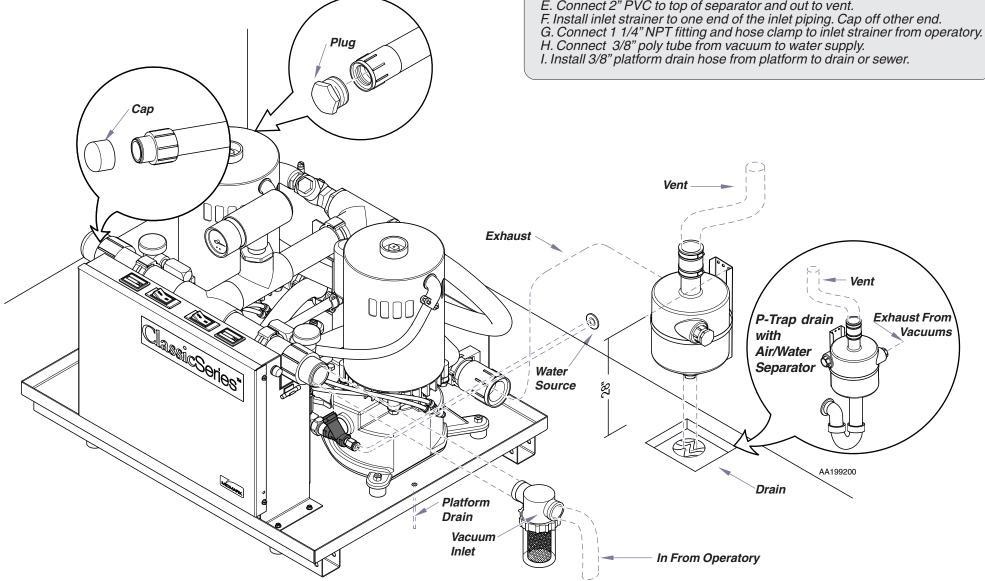

Installation

Plumbing Connections - Twin Models without Air/Water Separator

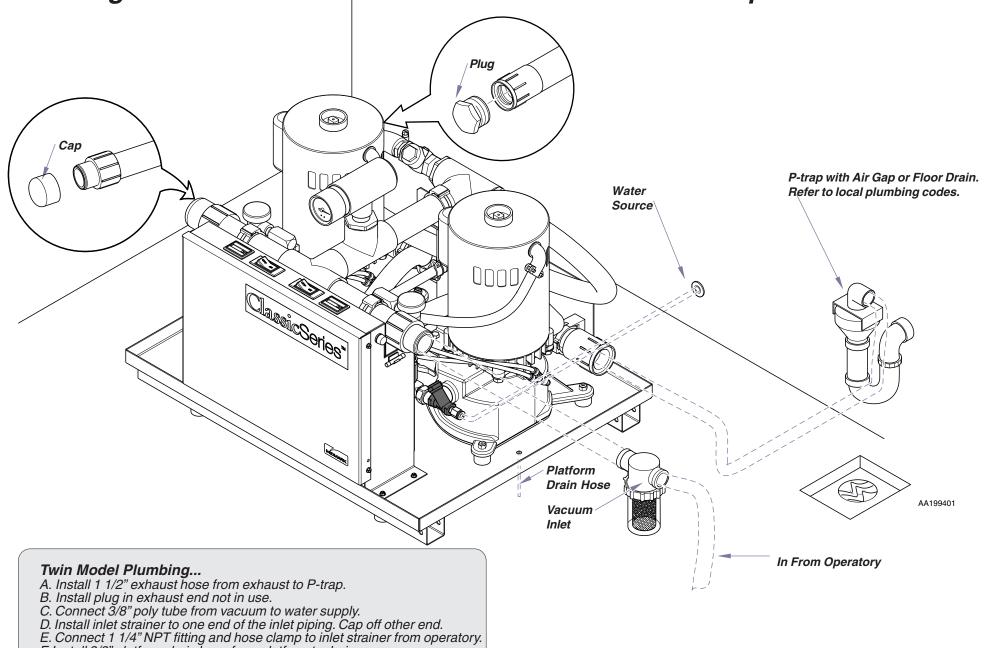

F. Install 3/8" platform drain hose from platform to drain or sewer.

Installation - Single Models Electrical - Convert 1 1/4 HP model to 115 Voltage (if applicable)

Note

CV3 and CV3R Models are factory configured for 208-230 Volt operation and can be rewired to operate on 115 Voltage. All vacuum systems are to be installed according to local electrical codes.

Refer to Specification Sheet for Electrical Ratings located in this manual.

To convert 1 1/4 HP Motor from 208-230V to 115V...

- A. Loosen screws on electrical box to remove cover.
- B. Install line voltage conduit with conduit connector in side of vacuum electrical box.
- C. Connect line voltage to leads at terminals X1 (Black) and X4 (White-Neutral).
- D. Connect ground wire to ground (green/yellow) lead.
- E. Remove all three jumpers from terminal block and relocate at ...

X3 and X4


X5 and X6

X7 and X8

Conduit Entry



115 Voltage Configuration

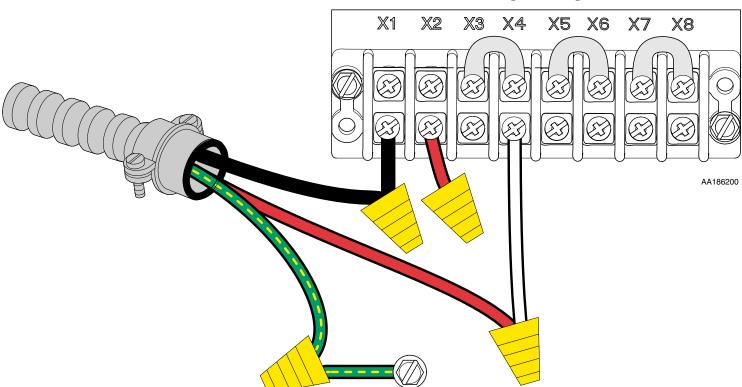


Proceed to Supply Box and Remote Panel Installation

Installation - Single Models Electrical Connections for 1 1/4 HP 208-230 Voltage


To connect 1 1/4 HP Motor to 208-230V ...

- A. Loosen screws on electrical box to remove cover.
- B. Install line voltage conduit with conduit connector in side of vacuum electrical box.
- C. Connect line voltage to leads at terminals X1 (Black) and X2 (Red).
- D. Connect ground wire to ground (green/yellow) lead.
- E. Verify jumper locations ... X2 and X3

X6 and X7

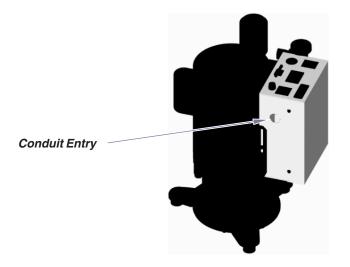

208-230 Voltage Configuration

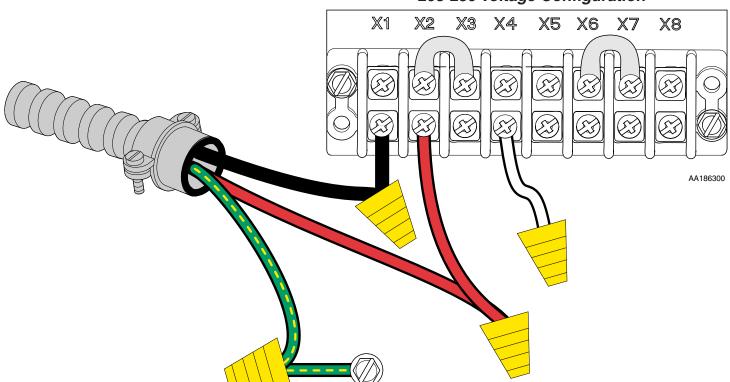

Installation - Single Models Electrical Connections - 2 HP 208-230 Voltage


- To connect 2Hp Motor to 208-230V ...


 A. Loosen screws on electrical box to remove cover.

 B. Install line voltage conduit with conduit connector in side of vacuum electrical box.

 C. Connect line voltage to Red and Black contactor leads.

 D. Connect ground wire to ground (green/yellow) lead.

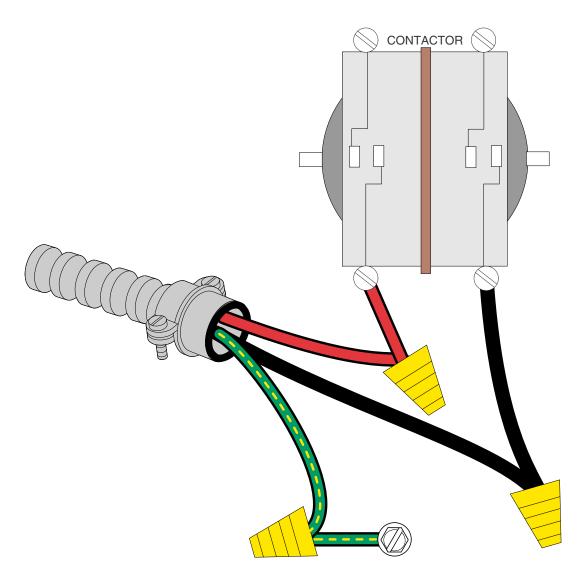

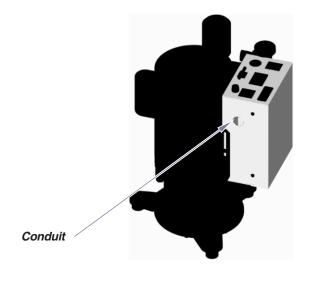


AA186400

Proceed to Supply Box and Remote Panel Installation

Installation - Twin Models

Electrical Connections - Convert 1 1/4 HP models to 115 Voltage (if applicable)

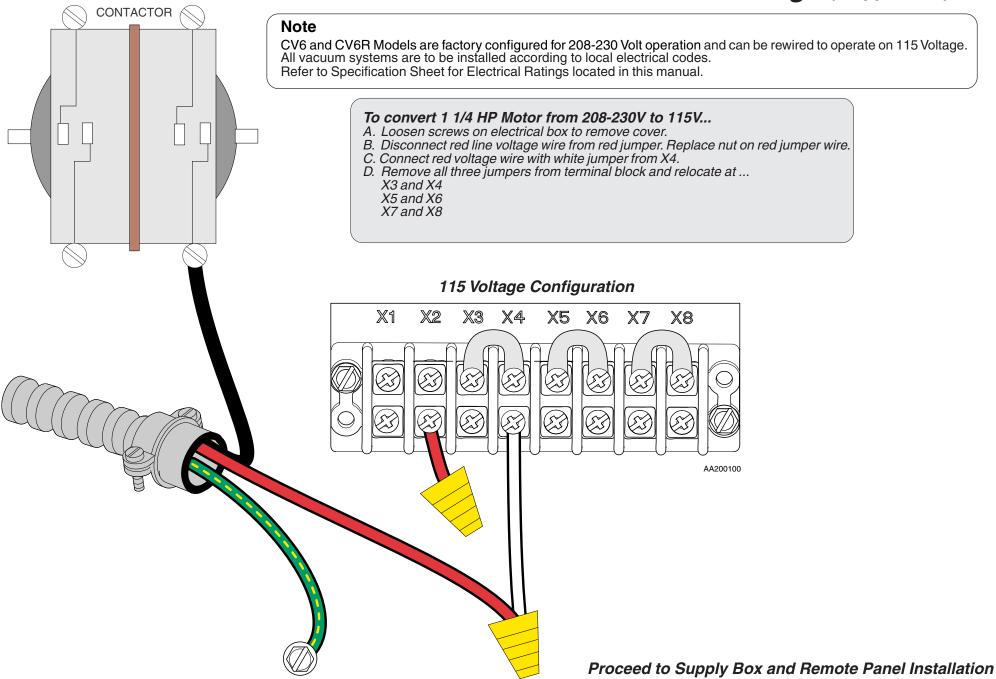

Installation

Electrical Connections - Supply Box and Remote Panel

Electrical Connections...

A. Connect conduit cable(s) to user supplied electrical box(s).


B. Connect remote panel wires to Low Voltage Control wires if applicable.

Note: All vacuum systems are to be installed according to local electrical codes. Never operate the equipment without complete and proper grounding. Refer to Specification Sheet for Electrical Ratings, located in this manual.


Supply Box

*1 1/4 HP Models 115 Volt Source OR 208-230 Volt Source Single Phase, 50/60 Hz Recommended - 20 Amp Fuse Disconnect Box (Eletrician Supplied)

*2 HP Models 208-230 Volt Source Single Phase, 50/60 Hz Recommended - 20 Amp Fuse Disconnect Box (Eletrician Supplied)

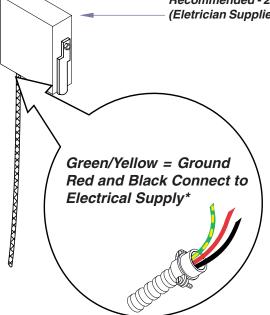

Remote Panel

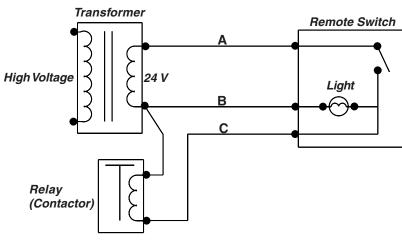

Control Panel Wiring Cross Reference							
BRAND	WIRE						
DRAND	Α	B (light)	С				
Midmark	Blue	White	Red				
Air Techniques	Yellow	Brown	Orange				
DentalEZ	Black	Brown	Yellow				
Apollo	Blue	White	Red				
Matrix	Red	Blue	White				

Installation Check & Test

Equipment Alert


Perform Checks before operation. Turn only one vacuum on at a time while checking. Operating vacuum without full pressure water supply will result in serious seal damage.

- Initial Start-up Checks, Verify...


 A. All water supply valves are "OPEN"


 B. Exhaust hoses have water flowing through each pump and no leaks are present.
- C. Check vacuum gauge to ensure it reads 10 "Hg.

Note: If necessary perform Vacuum Relief Valve adjustment as shown below.

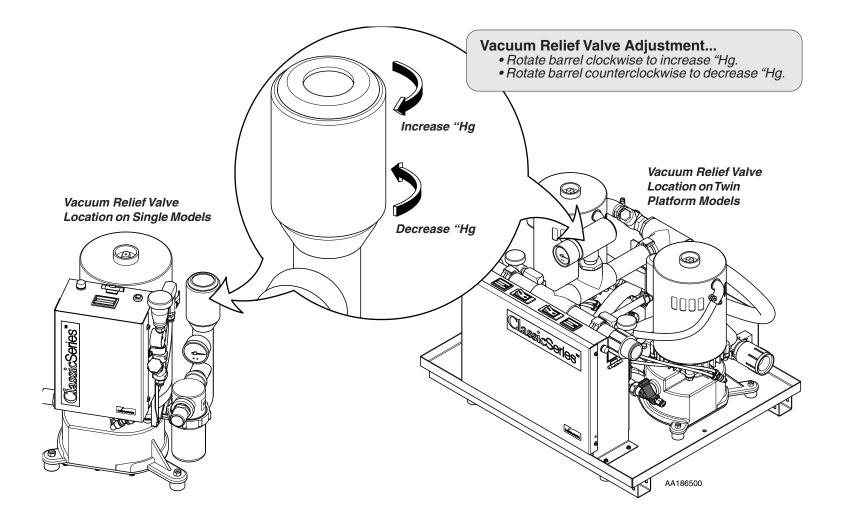

Specification Sheet ClassicSeries® Wet-Ring Vacuums

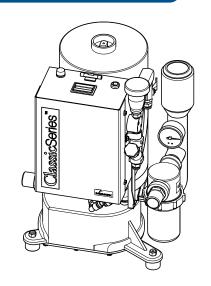


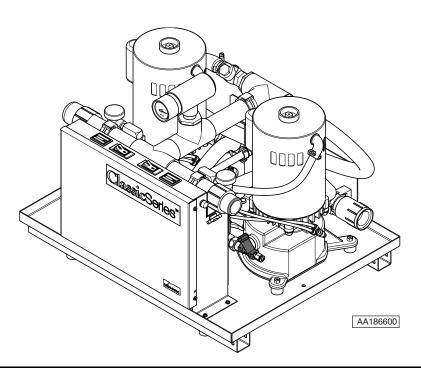

Vacuum Model	Max. Users	Width (IN.)	Depth (IN.)	Height (IN.)	Weight (LBS.)	Total HP	Voltage (50/60 Hertz)	Breaker Size per Pump (Amps)	Inlet Connection Size (IN.)	Drain Connection Size (IN.)	Fresh Water Connection Size (FNPT)
CV3	3	12"	13"	15"	54	1 1/4	115 / 208-230	20	1"	1"	1/2"
CV3R	3	12"	13"	15"	56	1 1/4	115 / 208-230	20	1"	1"	1/2"
CV5	5	12"	13"	17"	63	2	208-230	20	1"	1"	1/2"
CV5R	5	12"	13"	17"	65	2	208-230	20	1"	1"	1/2"
CV6	6	25 1/2"	20"	18 1/2"	134	2 1/2	115 / 208-230	20	1 1/4"	1 1/4"	1/2"
CV6R	6	25 1/2"	20"	18 1/2"	134	2 1/2	115 / 208-230	20	1 1/4"	1 1/4"	1/2"
CV10	10	25 1/2"	20"	18 1/2"	154	4	208-230	20	1 1/4"	1 1/4"	1/2"
CV10R	10	25 1/2"	20"	18 1/2"	154	4	208-230	20	1 1/4"	1 1/4"	1/2"

www.Midmark.com • 1-800-Midmark

© Midmark Corporation 2007 16

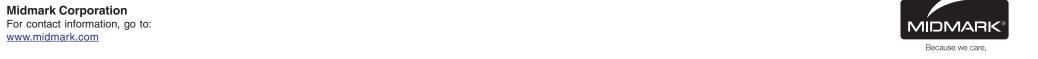

©Midmark Corporation 2007 17